



RxMS Air Pressure Sensor Assembly and Installation Instructions

1. Completed RxMS Air Pressure Sensor
 - a. Maximum Air Pressure of 300 PSI.
2. Industrial Shape Pneumatic Hose Couplings
 - a. All Threaded fittings are 1/4 inch, 1/2 inch, or any size NPT (National Pipe Thread).
 - b. Male Hose Connection and Female Hose Coupling: 1/4 inch, 1/2 inch, or any size Coupler.
3. Air Pressure Sensor – 1/4 inch NPT
4. Brass Female Tee
 - a. NPT (National Pipe Thread) size of:
 - 1/4 inch by 1/4 inch by 1/4 inch
 - 1/2 inch by 1/2 inch by 1/2 inch
 - or any size

1. Disconnect Air Lines
2. Attach the Air Pressure Sensor to the Equipment
 - a. To connect, pull back the sleeve on the socket, and insert the plug.
 - b. Release the sleeve (with the plug in the socket) to engage locking mechanism, and lock the plug in place.
 - c. To disconnect, slide the sleeve back towards the socket (which will release the locking mechanism), and remove the plug.
3. Attach the air supply to the Air Pressure Sensor
4. Plug the Air Pressure Sensor cable into the Air Pressure port (AUX 2 if not labeled), on the front panel of the RxMS Power Monitor.

THIS INFORMATION IS PROPERTY OF:

Rx MONITORING SERVICES, INC · 22A EASTMAN AVE. · BEDFORD, NH 03110-6701
TELEPHONE: (603) 666-6606 · **TECH SUPPORT:** (603) 930-3316 · **WEB:** WWW.RXMS.COM